

Brojač lanca za sidro EV040

399 €

Korisnik: **luckywave** | ID oglasa: **35035**

Lokacija: Split, hr

Županija: Splitsko-dalmatinska

Dužina: m

Širina: m

Godište:

Motor:

Zastava:

Telefon: 091-785-6824

- Savršeno opterećenje zahvaljujući punjivoj bateriji,
 - Sloboda manevra i udobnost rada tijekom sidrenja.
 - Radna frekvencija 868 MHz
 - naznake na 5 jezika
 - Jednostavna i neposredna upotreba
 - Funkcija alarma
 - Funkcija auto. spuštanja
 - Prikaz brzine manevra
 - Prikaz napona napajanja motora
 - Izbor jedinica mjere
 - LCD zaslon visoke rezolucije
 - Podesivi prikaz sustava rasvjete
 - VPC cijena
-



**Table 1 - Standard and Project X... series sensor
(magnet and sensor placed on barbotin)**


Chain Type	Number of recesses	Gipsy Circumference (cm)	Gipsy Circumference (inches)
6 mm	6	22	9
	9	34	13
7 mm	6	25	10
	9	37	15
8 mm	6	28	11
	9	42	17
10 mm	6	36	14
	9	54	21
12 mm	6	43	17
	9	65	26
13 mm	6	46	18
	9	69	27
14 mm	6	48	19
	9	72	28

* factory setting of instrument

**Table 2 - 1000 - 1500 - 2000W Project series sensor
(magnet and sensor placed on motor)**

Type	Gipsy Circumfer. (cm)	Reduction ratio	Number of recesses	Chain type (mm-inches)	Reduction Factor
Project 1000	30	1:52	6	8-5/16 HT	57*
	30	1:52	5	10 DIN 766	59
	31	1:52	5	10 ISO-3/8 HT	59
	34	1:52	9	6	66
Project 1500	30	1:70	6	8-5/16 HT	43
	30	1:70	5	10 DIN 766	43
	31	1:70	5	10 ISO-3/8 HT	44
	36	1:70	5	12 ISO-13 DIN 766-7/16 HT	51
Project 2000	39	1:75	6	3/8 HT	53
	40	1:75	6	3/8 Proof Coil	53
	41	1:75	6	10 DIN 766-3/8 BBB	54
	44	1:75	7	10 ISO	58
	45	1:75	5	14 ISO	60
	46	1:75	6	12 ISO-13 DIN 766	61
	47	1:75	5	13 DIN 764	63


* factory setting of instrument

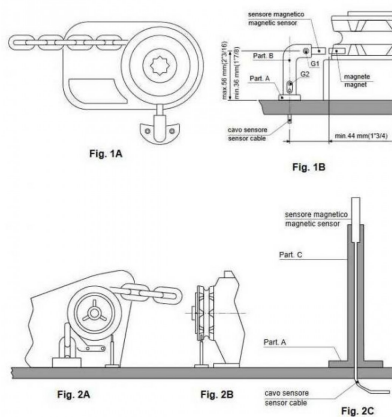

Connections

6-POLE CONNECTOR	
PIN	SIGNAL
1	+ battery
2	- battery
3	DOWN command
4	UP command
5	Magnetic sensor
6	

Sensor hole

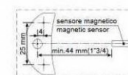

Recharging the transmitter

- Open the cap on the rear of the transmitter, insert the plug of the battery charger making sure that the reference mark is facing upward. Plug the battery charger into a cigarette lighter to start charging.
- When the charger is switched on the blue LED will light up.

